

TROUBLESHOOTING

- **Cleaner does not operate:** Check the wall socket for power, verify that the power cord is securely plugged into the back of the cleaner. Verify that the red power LED is on. If the red led is illuminated and the cleaner does not make any noise when the "Timer" key or the "Start" key is pressed check the fuse.
- **Cleaner ran dry:** Turn the cleaner off and allow it to cool. Do not pour solution into the hot tank; it may crack the transducer. Allow the cleaner to cool, pour solution into tank and resume cleaning. If cleaner does not operate check the fuse.
- **Water inside cleaner:** Unplug and turn off the cleaner. Allow the cleaner to dry out. Test the cleaner the next day. If cleaner does not operate, the water may have blown the fuse or damaged the electronics inside.
- **Cleaner smokes or smells:** Does the cleaner have the proper water level? If the water level is too low, the tank heater is getting too hot. Test with heater turned off.

Tank transducers (Ceramic discs on bottom of tank), heater or control board burning or damaged. Discontinue operation, have the cleaner serviced.

- **Heater is not heating:** Is heater switch light on? (Switch lights when switch is on.) Put cold water into the tank and check the back side of the tank for heat. If no heating is detected, the heater or temperature cutoff may be defective.